



Instruction Manual



SKU#: EFAT631

Anti-Pooling Pro Shelter 10' x 10'

WARNING:


- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with fabric that meets CP AI-84 specification for flame resistance . It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- Always secure the gazebo with pegs and guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gust. Extra weight down at legs is highly recommended.
- Do not use in extreme weather conditions. Do not use in lightning storms. Do not use in very windy weather. Do not over use in rainy weather. Take down the gazebo before extreme weather events.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed for temporary use, not a permanent structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Keep children away from the set up area.
- Utility Hook for small hanging object only. Do not hang any object heavier than 5 lbs. Check the hook every time before use. Do not use if it comes loose!
- Avoid twisting the frame during set up. Raise legs evenly. The frame tubes may break if you twist the frame too much.

CARE AND MAINTENANCE


- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.

SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

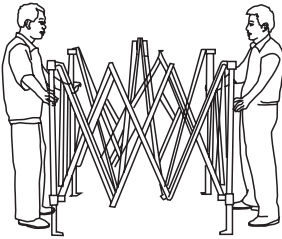


1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

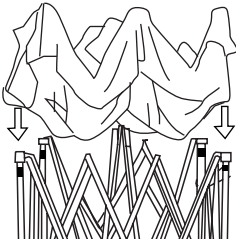


2. Place the fabric top over the frame but do not fix it. You may always place the fabric top later till the frame fully opened if it's too heavy to you to do the set up with fabric top.



3. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger and not pull backward too hard as this may result in the bending of cross beams.

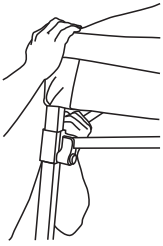


4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand until it locks in to place. Repeat this for the rest of corners.

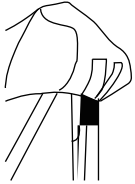


5. Use the Velcro pads to secure each corner of the fabric top to the frame under the plastic leg caps.




6. To secure the fabric top to the frame, please wrap the hook and loop straps around roof tubes. Using the clip attach the strap around the lowest point of the beam next to the hinge.

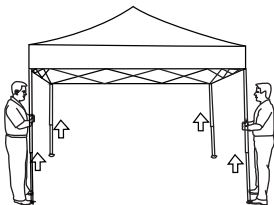


7. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. Please raise legs evenly. Avoid twisting the frame during set up. The frame tubes may break if you twist the frame too much. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg till the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.

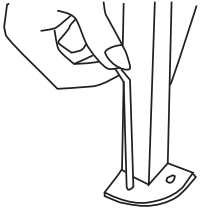

8. Peg down the gazebo by driving the 4 small pegs through one of the holes on the base of each foot. This will keep the leg from moving sideways in mild weather conditions.

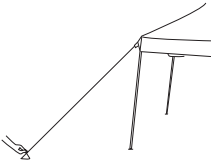


9. Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Pull the guy rope out from the corner of the gazebo towards the ground at a 45 degree angle. Hammer one of the larger pegs in to the ground and secure the guy rope firmly to it. Make sure the guy ropes have adequate tension.
THE GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES!

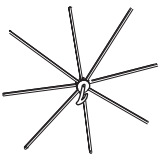


Warning: Utility Hook for small hanging object only.
Do not hang any object heavier than 2kgs.
Check the hook every time before use.
Do not use if it comes loose!

PACK -DOWN INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN.

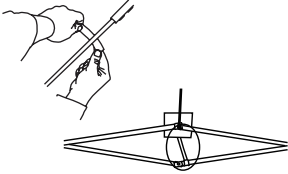


1. Undo the hook and loop straps of the fabric top from around the roof tubes. Detach the clips from each side of cross section beams. Failure to do so may tear the fabric during take-down. Remove spikes or weighted anchors.

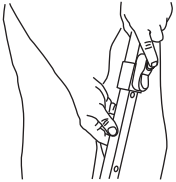


2. Release push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.

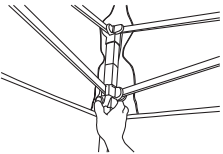


3. **CRITICAL STEP TO AVOID FRAME DAMAGE!**
Release sliders at all four corners depressing the push button and gently pushing the corners down slightly.

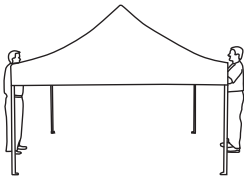

4. Remove canopy to avoid the frame causing any damage to it and pack away separately in the storage pocket on the front of the bag. With partner on the opposite side, grasp the middle section of the frame and lift up slightly.

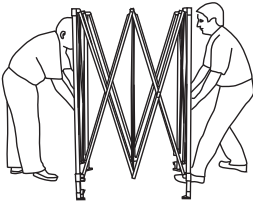


5. Walk forward slowly allowing for the frame to fold inward and close. Be careful not to pinch fingers or hands as you close the frame.

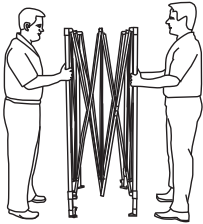

6. Completely close the frame.



7. Stand the closed frame on the ground, and pull the storage bag top down over the frame. Carefully lay down the storage bag, then flip the bottom on and zip the storage bag completely shut. Please do not drop the frame during the process to avoid damage the frame. Be sure the gazebo is completely dry before storage.

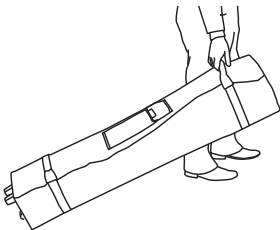

8. Wheel your gazebo to your desired storage area.

Email: service@ezyfast.net
Web: www.ezyfast.net
Code: EFAT631
V3. 2020

