

**EzyFast**  
Instruction Manual



SKU: 20JSEF00521  
EzyFast Antipool Pro Canopy 12'x12'

[www.ezyfast.net](http://www.ezyfast.net)

Email: [service@ezyfast.net](mailto:service@ezyfast.net)  
Code: 20JSEF00521  
V1. 2020




**WARNING:**


- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with fabric that meets CPAI-84 specification for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- **Always secure the gazebo with pegs and guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gust. Extra weight down at legs is highly recommended.**
- Do not use in extreme weather conditions. Do not use in lightning storms. Do not use in very windy weather. Do not over use in rainy weather. Take down the gazebo before extreme weather events.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed for temporary use, not a permanent structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Keep children away from the set up area.
- Utility Hook for small hanging object only. Do not hang any object heavier than 5 lbs. Check the hook every time before use. Do not use if it comes loose!
- Avoid twisting the frame during set up. Raise legs evenly. The frame tubes may break if you twist the frame too much.

**CARE AND MAINTENANCE**

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.
- There could be some minor leaking or dripping from the seams, recommend to use seam-sealer spray, available at most hardware stores or on-line stores.

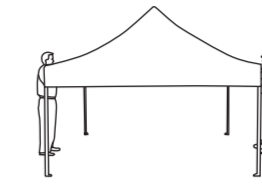


5. **Remove the fabric top:** Suggest to remove the fabric top and packed away before closing the frame. In case leave fabric top on, **please avoid getting fabric into truss beam which will for sure cut into fabric and tear the fabric during the closing!**

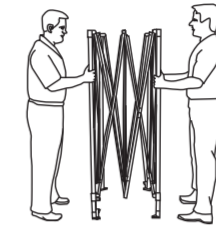

6. **Close the frame:** Slightly lift the frame off the ground and walk slowly towards each other. **Be careful not to pinch each other's fingers or hands!**



7. **Pack into bag:** Stand the closed frame on the ground. Pull the storage bag top down over the frame. Lay the frame on the ground, flip the bag bottom up and zip the bag completely shut. **Please do not drop the frame during the process which cause damage! Be sure the frame and fabric top completely dry before storage to avoid mildew!**

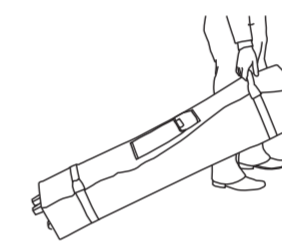


**TAKE DOWN INSTRUCTIONS**


**IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN.**



 
1. **Undo Velcro straps:** Undo all Velcro straps or ties from around the roof tubes and cross beams. Failure to do so may tear the fabric during take down!

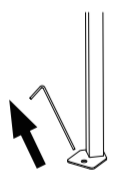

2. **Remove pegs, guy ropes.**

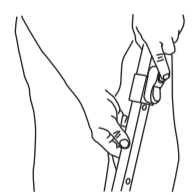


3. **Lower the legs:** Push in push button at leg extenders and shorten the legs fully. **Two adjacent legs same time each time to avoid twisting the frame.**

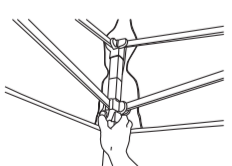


4. **Release frame lock:** Depress the bush button at each corner. Pull down slightly. **Make sure all four corners are unlocked, otherwise frame may break while you close the frame!**

**SET UP INSTRUCTIONS**


**IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP**

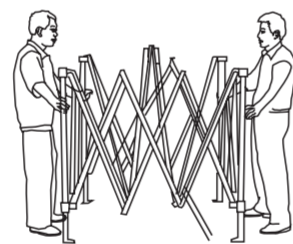

1. **Expand the frame:** Slightly lift the frame off the ground, extend the frame half way.

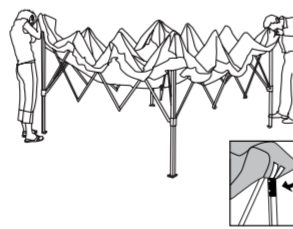


2. **Place canopy top:** Line up the fabric corner to frame corner. Match Velcro pads. **Note not to tangle the inside corner fabric layer while attaching it to the frame corner. Or it may tear the fabric when frame fully is extended.**

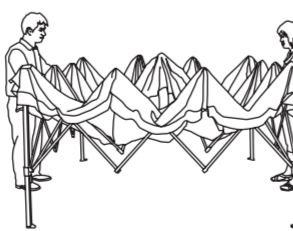

3. **Further extend the frame:** Lift slightly, shake the frame, in the mean time slowly walk backward to extend the frame as much as possible. **Be careful not to pinch each other's fingers or hands. Please also avoid pulling the frame forcefully to avoid the bending the tubes.**






4. **Push up and lock the frame:** One person get under the canopy, gradually push the lower roof hub up. Shake the frame in the mean time to further expand the canopy till the frame is fully extended. While one person hold the roof inside the canopy, the other person then engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand till it locks in to place itself. Repeat this for the rest of corners.

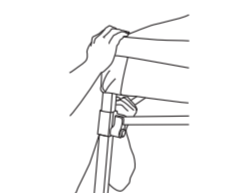


5. **Secure the fabric top:** Wrap the Velcro straps around the roof tubes and cross beams. **Keep the fabric taut and secured. Otherwise the canopy might still pool in rain!**




6. **Raise the legs:** Lift two adjacent legs same time each time, pull out the inner legs till them click in position by themselves. Repeat at the other two legs. **Make sure raise two adjacent legs each time to avoid the twisting the frame which could result in breaking the tubes.** The legs offer three height levels. To adjust, lift the legs up, depress the push button at leg extender to unlock and then just move the inner legs. They will click into next position themselves. **Be noted not to over pull the inner legs to exceed the maximum height position.**

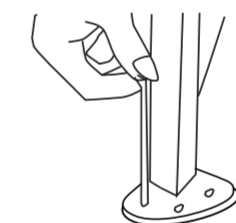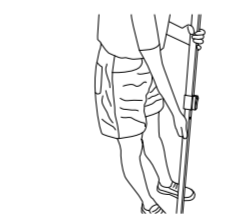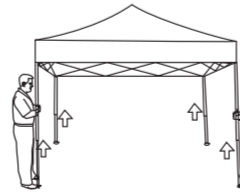

7. **Peg down the legs:** drive the 4 small pegs to keep the leg from moving sideways in mild weather conditions.

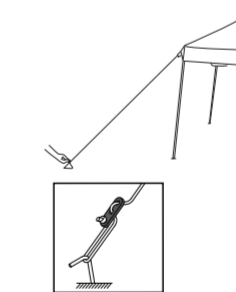

8. **Secure the canopy:** Use guy ropes to tie one end to the guy rope points at each corner and the other end to large pegs at ground. Make guy ropes have proper tension. **The canopy must be secured with guy ropes and pegs. Highly recommend to take any extra measures to secure the canopy such as using weight bags. A gust of wind may blow the canopy over if it's not appropriately secured!**

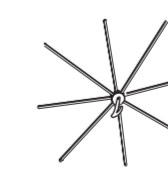

**Warning:** Utility Hook for small hanging object only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!