


EzyFast

Instruction Manual

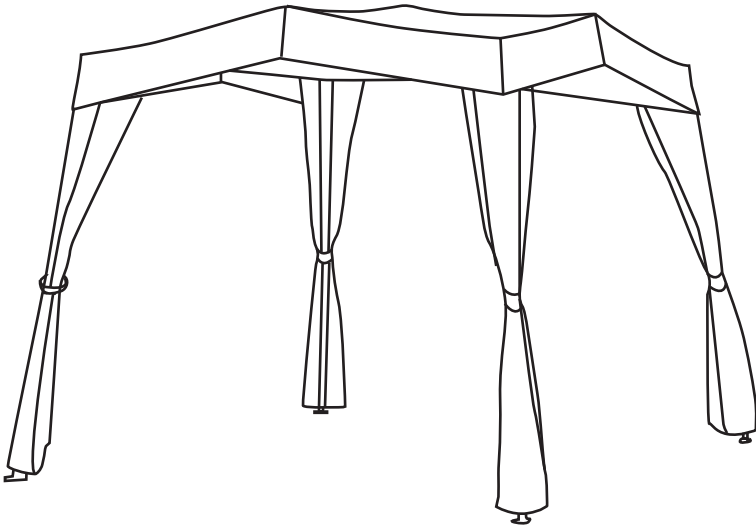

SKU: 17JSEF110902
Resort Style Gazebo with
Gravity Corner Curtain

WARNING:

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.**
This tent is made with fabric that meets CPAI-84 specification for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- **Always weight down and secure your gazebos.** It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gusts. Do not use in very windy weather.
- **This gazebo is designed for Sun Shade ONLY.** Do not use at raining days! The excessive rain water may pool on canopy top and damage the gazebo.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed as a temporary sun shelter, not a permanent structure. **Do not leave up for extended periods and do not leave the gazebo unattended.** Take down the gazebo and store away after use.
- Do not use your gazebo in lightning storms or in extreme weather conditions.

CARE AND MAINTENANCE


- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.
- To keep corner curtain tidy, suggest to raise gazebo to the highest position for corner curtain to be off ground while floor is wet or dirty.
- While use on beach, do not let sands stuck into telescoping tubes.

SET-UP INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP




1. Take out the frame and canopy top from the carrybag and stand the frame on its feet.

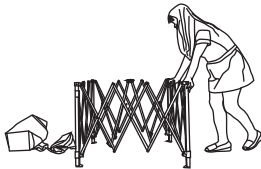


2. Expand the frame. Always be cautious to avoid pinching your hands and fingers during the process!

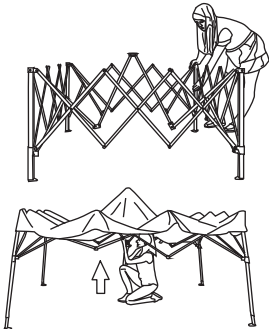


3. Lift one corner each time and walk backwards to expand the frame further. You may also walk into the gazebo and push up the gazebo under it to expand the frame as much as you can.

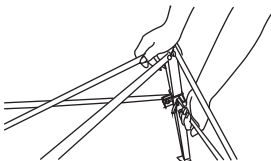


4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand until it locks in place.

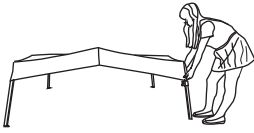


5. Place the canopy over the top frame. Use the Velcro pads to secure the canopy to the frame at each corner.

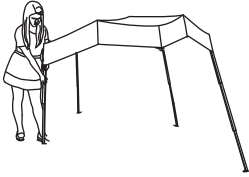


6. Gently pull out the inner leg till the spring pin pops out in position. There are two height options, you may adjust the height by depressing the pins and telescope legs to the desired height position. Please do not pull the legs over its limit.

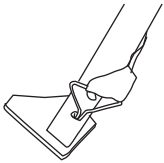

7. Pull down the gravity corner curtain and hook onto the hole of lower leg. Then tie up the corner curtain. Repeat on all the legs.

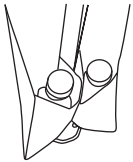

8. Gravity corner curtains have weight pockets for you to fill them with sand or water bottles. **Canopy may catch wind and be blew away. Please always weight down or secure your gazebo.**

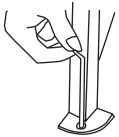


9. Stake down the gazebo by driving the 4 small anchors through the hole on each base foot. This will keep the leg from moving sideways in mild weather conditions.

FOR STABILITY, THIS GAZEBO SHALL BE SECURED OR WEIGHTED DOWN TO THE GROUND WITH ALL KINDS OF MEASURES. IT'S CRUCIAL TO TAKE SUCH MEASURES ANY TIME YOU HAVE THE GAZEBO UP TO MINIMIZE THE IMPACT OF UNEXPECTED WIND GUSTS.

PLEASE READ

**This is a shade structure, not a permanent structure.
Gazebo must be packed down when not in use.
This gazebo should not be left unattended.**

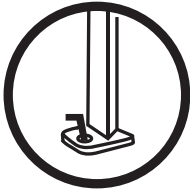

*Secure the frame
with pegs.*



*Keep away from
heat sources and
open flames.*




*Do not use during
severe weather
conditions.*

PACK-DOWN INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS BEFORE TAKING DOWN.




1. Release the spring button lock and shorten the telescopic legs.

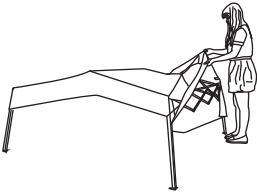

2. Remove the canopy top from the frame and fold it up nicely. Do not put it in the carrybag before frame.

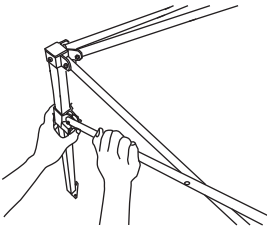


3. Release sliders at all four corners by pushing the red plastic button and gently push the sliders down to leave the locking position.

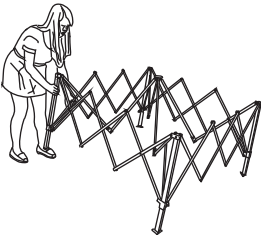

4. With all four corner locking released, lift and walk one corner of the frame towards the opposite corner to close the frame. Be cautious not to pinch hands or fingers!



5. Fully compress frame so it will fit easily into the bag.

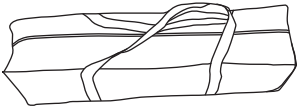

6. Put the compressed frame into the carrybag and then slide the folded canopy into the carrybag too. Zip the carrybag. Ensure canopy and gazebo is completely dry before storing away.

www.ezyfast.net

Email: service@ezyfast.net

Code: 17JSEF110902

V2 . 2019

