

EzyFast

Instruction Manual



Anti-Pooling Shelter 10' x 10'

WARNING:

- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with fabric that meets CPAI-84 specification for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- **Always secure the gazebo with pegs and guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gust. Extra weight down at legs is highly recommended.**
- Do not use in extreme weather conditions. Do not use in lightning storms. Do not use in very windy weather. Do not over use in rainy weather. Take down the gazebo before extreme weather events.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- The gazebo is designed for temporary use, not a permanent structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Keep children away from the set up area.
- Utility Hook for small hanging object only. Do not hang any object heavier than 5 lbs. Check the hook every time before use. Do not use if it comes loose!


CARE AND MAINTENANCE

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to storage bag after use. Suggest to take the canopy off the frame for separate storage in the bag. Be sure the canopy is completely dry before storing it.


SET-UP Instructions

Fabric Top Attachment


Note: When assembling be careful not to let fabric top touch the ground to prevent dirt and staining.

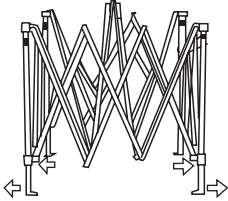

1. Expand frame to arms length.

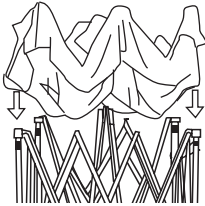


2. Unfold and position fabric top over frame.

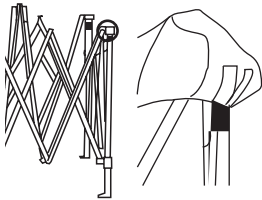


3. Align the four Velcro corners.

Operating Instructions

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

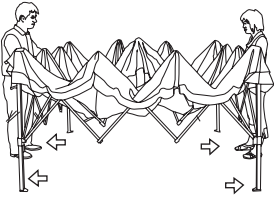


1. Each person should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger and not pull backward too hard as this may result in the bending of cross beams.

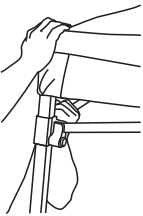


2. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand until it locks in to place. Repeat this for the rest of corners.




3. To secure the fabric top to the frame, please wrap the hook and loop straps around roof tubes and cross beams.

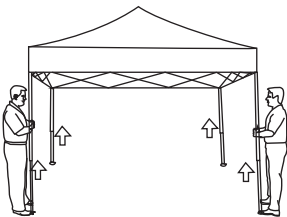

4. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg till the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.

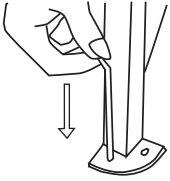


5. Peg down the gazebo by driving the 4 small pegs through one of the holes on the base of each foot.

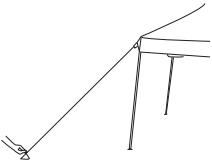

6. Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Pull the guy rope out from the corner of the gazebo towards the ground at a 45 degree angle.


THE GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES!

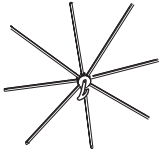

Warning: Utility Hook for small hanging object only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!

One-Person Setup


IMPORTANT: IN CASE ONLY ONE PERSON TO DO THE SET-UP, PLEASE FOLLOW BELOW STEPS. ALWAYS USE YOUR COMMON SENSE AD BE CAUTIOUS ALL THE TIME DURING SET UP. IF IT'S TOO HEAVY TO YOU, YOU MAY GET THE FRAME OPENED FIRST AND THEN PUT THE FABRIC TOP ON LATER.

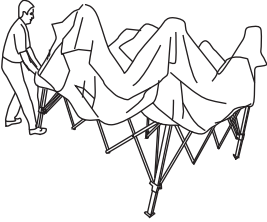


1. Position frame in open area. Grasp one leg and lift the frame with three legs off ground and one pivot on the ground, walk backward to expand the frame as much as possible.



2. Position yourself under the frame, gently push up from from bottom of central hub and shake the frame until it fully expanded.

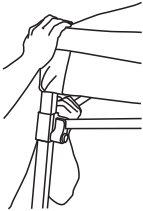

3. Lock all four corner sliders.

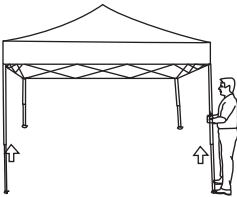


4. Extend telescopic legs one at a time while walking around the frame. There are three height adjustments. Do not over pull the leg.

Take-Down Instructions


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF TAKE-DOWN




1. **Undo the hook and loop straps of the fabric top from around the roof tubes and cross beams. Failure to do so may tear the fabric during take-down.** Remove spikes or weighted anchors.




2. Release push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.

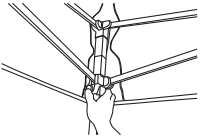

3. **Critical step to avoid frame damage!** Release sliders at all four corners depressing the push button and gently pushing the corners down slightly.

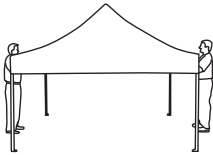


4. Remove canopy to avoid the frame causing any damage to it and pack away separately in the storage pocket on the front of the bag.

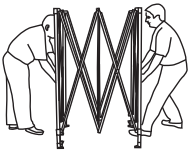

5. Walk forward slowly allowing for the frame to fold inward and close. Be careful not to pinch fingers or hands as you close the frame.



6. Stand the closed frame on the ground, and pull the storage bag top down over the frame. Carefully lay down the storage bag, then flip the bottom on and zip the storage bag completely shut. Be sure the gazebo is completely dry before storage.

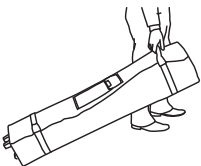

7. Wheel your gazebo to your desired storage area.

Email: service@ezyfast.net
Web: www.ezyfast.net
Code: EFAT331
V2. 2018

